

# vista quick reference card

**vivint.**

the instructions on this card will guide you through the basic functions of your vista panel. for additional questions, you can consult the user manual or call technical support at 800.216.5232.

## Arm and Disarm Your System

To arm all of your sensors (including any motion detectors), press Mastercode > [2 AWAY].

To arm all of your sensors (excluding any motion detectors), press Mastercode > [3 STAY].

To disarm your system, press Mastercode > [1 OFF].

## Change User Codes

To change your four-digit master code, press Mastercode > [8] > [0] > [2] > New Code > New Code.

To create a secondary code (e.g., user 03) for other users, press Mastercode > [8] > [0] > [3] > New Code.

To delete a secondary code (e.g., user 05), press Mastercode > [8] > [#] > [0].

Your system can accommodate up to 13 additional users as follows: (03), (04), (05), through (15). These secondary codes cannot create, change, or delete any other four-digit user codes.

## Enable and Disable Chime Function

To have your alarm system chime when you open protected zones, press Mastercode > [9].

To disable the chime function, press Mastercode > [9].

## Check System Status

To check the status of your alarm system, press [\*]. When disarmed, the system will display any open or faulting zones.

## Bypass Sensors

Bypassing allows you to keep individual protection zones from being monitored by the system.

To bypass a sensor, first determine the sensor's zone number by pressing [\*] then press Mastercode > [6] > [2-digit zone number].

Disarm your alarm system to unbypass your sensors.